



## Introduction of Exteriror Functions [Back]

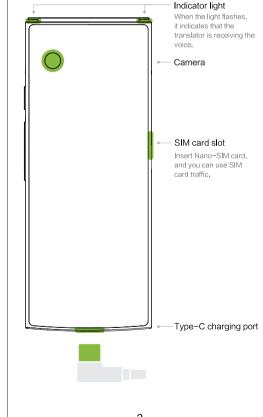

## Home page function

- Click or hold down the voice key on the screen for
- You can also hold down the volume button to speak and release to translate. (You need to click ": "in the lower right corner of the screen to turn on the function of "volume button reused as speech button")

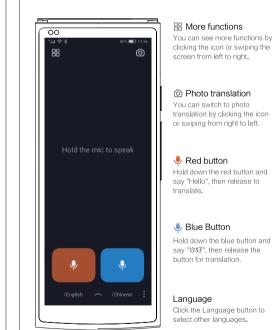

#### Voice Translation-button free

Pick up to talk and put down to translate.

Pick up the translator with the top front close to the mouth, about 10cm away. When you hear the "beep" sound, start to talk; then move the translator away from the mouth beyond 10cm to trigger the translation.

When using this function, please click ": " in the lower right corner of the voice translation interface to ensure that the "button-free translation" function is turned on.



#### Voice Translation-button free

Play the translation and receive voice automatically.

After finishing talking, you can play the translation to others in full screen. At the end of the play, the translator will automatically record and recognize other's voice and translate.




receive other's voice automatically.

## Face-to-face Translation

Split-screen communication with real-time display.

Great for extended conversations. Each party can take up half of the screen and tap the area on the screeen to start talking.

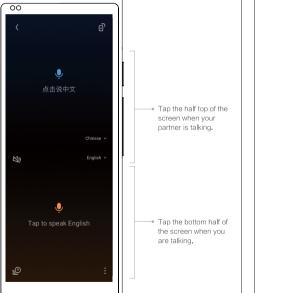

## Photo Translation

Full-screen framing, shooting and instant translation.

- Full screen mode: select the language to translate, and after pressing the shutter, it can directly translate the text into the target language.
- Smear mode: select the language you need to translate and press the shutter to smear the text of the area you need to translate into the target language.



# More applications

Click the icon in the upper left corner of the home page, or slide the page from left to right to see more applications and settings.

