iFLYTEK

iFLYTEK Smart Dictionary Pen Instruction Manual

Smart Dictionary Pen Introduction

Microphone
Do not poke with
pointed objects

Power Button
Short press for 2 seconds to power on, power off, or restart
Press and hold for more than 16 seconds to force a restart

Main/Recording
Button
Short press to return to the main page
Press and hold to activate the voice function

Scanner
Hold the pen and scan to the right to look up word translations

Connecting to WiFi

1. Turn on the dictionary pen and open "Settings".



2. Go to the WiFi settings, turn on your WiFi, choose a network and connect.



How to Scan



Hold the dictionary pen as shown in the picture.



Align the pen's center with the center of the text.



Keep the pen tip flat against the surface, and it is recommended to hold the pen on the paper at a 60 degree angle.



Slide the pen steadily from left to right.

EN-2

Come and scan

Scan and Translate

Fast

Apple

I can swim

Pronunciation evaluation

Knowledge comes from questioning.


Tap the U button after scanning to start oral evaluation

EN-3

IFLYTEK

iFLYTEK Smart Dictionary Pen 설명서

사전펜

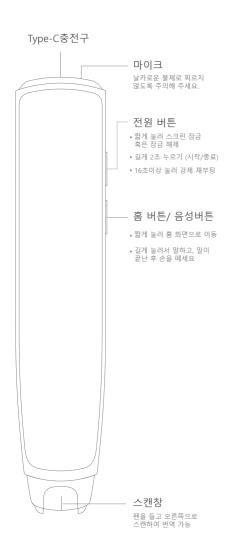

KR-1

WiFi 연결

1. 사전펜을 실행하여 [설정]을 선택합니다.

EN-1



2. WIFI 설정에서 WIFI선택 및 연결을 진행 합니다.



스캔 방법




펜의 스캔 각도는 그림과 같은 방법을 권장합니다.



스캔 창을 단어의 중심 선에 맞추세요.



스캔 창을 글자에 밀착합니다. 펜촉을 눌러 일정한 속도로 오른쪽으로 드래그 하면서 스캔합니다.



오른쪽으로 등속 하여 움직입니다.

꿈격합니다.

스캔해 보세요

스캔하여 검색/번역

빠르게

사과

수영을 할 줄 안다

발음 테스트

 ${\bf Knowledge\ comes\ from\ questioning.}$

스캔 후 U 버튼을 클릭하여 스피킹 테스트를 시작하세요

KR-3

제품명: iFLYTEK Smart Dictionary Pen 모델명: LP-32AK02 제조사: 아이플라이텍코리아 유한책임회사

주소: Ace Gasan FORHU Gasan digital 1-ro, Geumcheon-gu, Seoul, Republic of Korea

홈페이지: www.iflytekkorea.co.kr

K